



Dimension

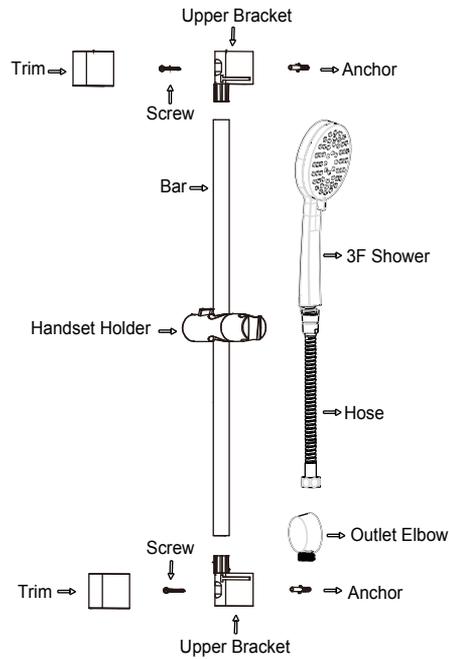


Tools Required (Not Supplied)

Drill, 6mm Masonry drill bit, Cross-head screwdriver, Spirit level, Pencil, Wrench.


Installation

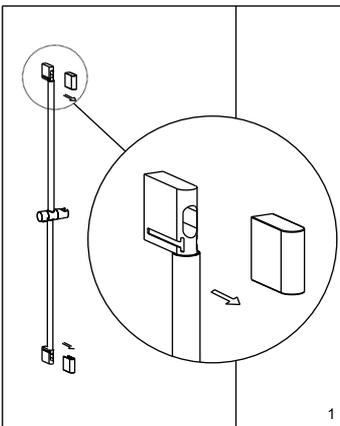


1. Loosen two trims but do not remove them. Place the bar to the wall vertically.

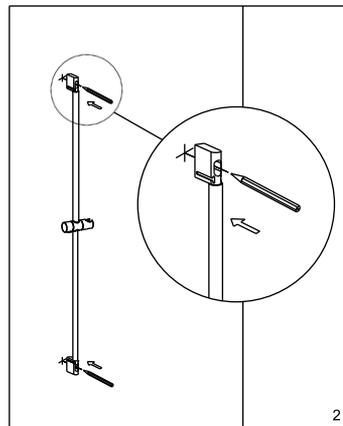


2. Mark two fitting holes .

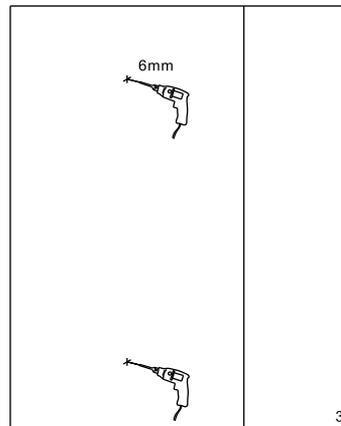


3. Drill two fitting holes by using a 6mm masonry drill bit.

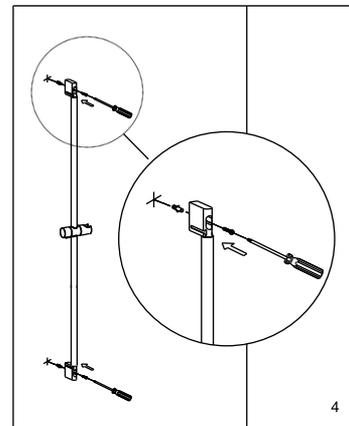


4. Fix the bar to the wall with anchors and screws.

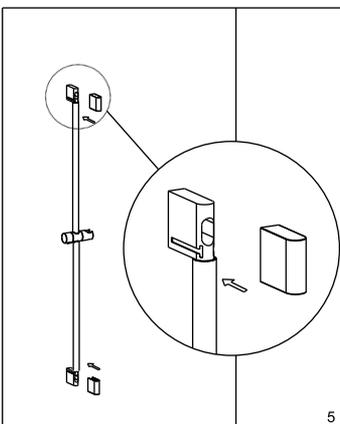


5. Assemble two trims back to brackets.

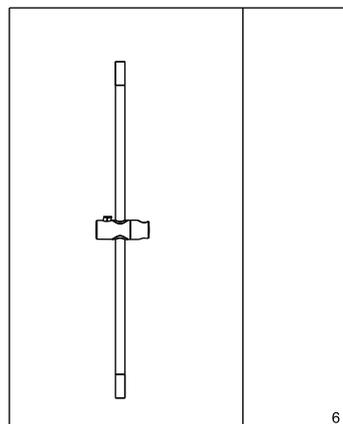

6. Complete the assembly of bar set.

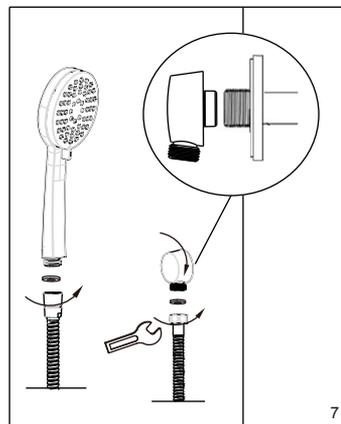

7. Tighten the elbow into the outlet. Connect two ends of shower hose to the elbow and the handset.

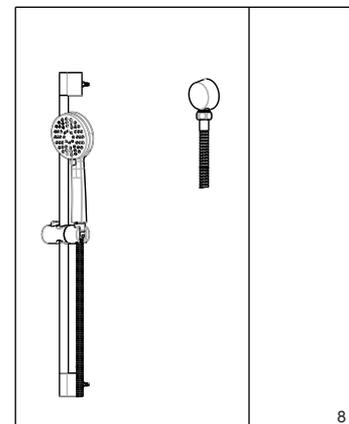

8. Done.