

## INSTALLATION INSTRUCTIONS

Click-clack Bath waste and overflow  
Chrome / Matt Black / Brushed Brass


**HOX.013CP/HOX.013MB/HOX.013BB**

### Important



- We recommend that this product is installed by a qualified professional contractor. Such as a plumber who is certified by NVQ (National Vocational Qualification) or SNVQ (Scottish National Vocational Qualification) Level 3.
- Please check this product immediately to ensure that it has not been damaged and is complete. Before installation, please make sure this product is the correct model and you have all the parts required for installation and using.
- Please flush the water system to ensure that no metal swarf, solder, and other impurities can enter the products.
- Please read these instructions carefully and keep it for future reference.

**⚠ DO NOT overtighten the waste as this may cause long term damage to the bath. We recommend to use a torque wrench to tighten the waste by using a torque force between 25 Nm and 50 Nm.**

### Dimension

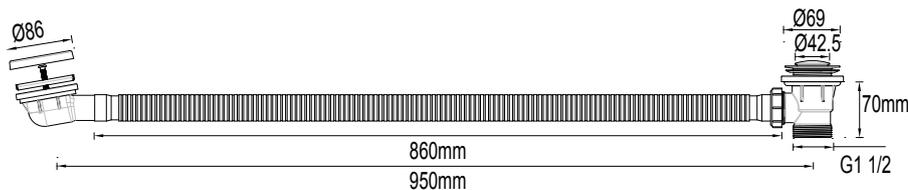

### Installation

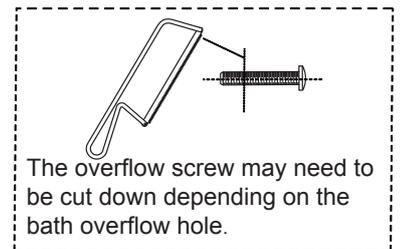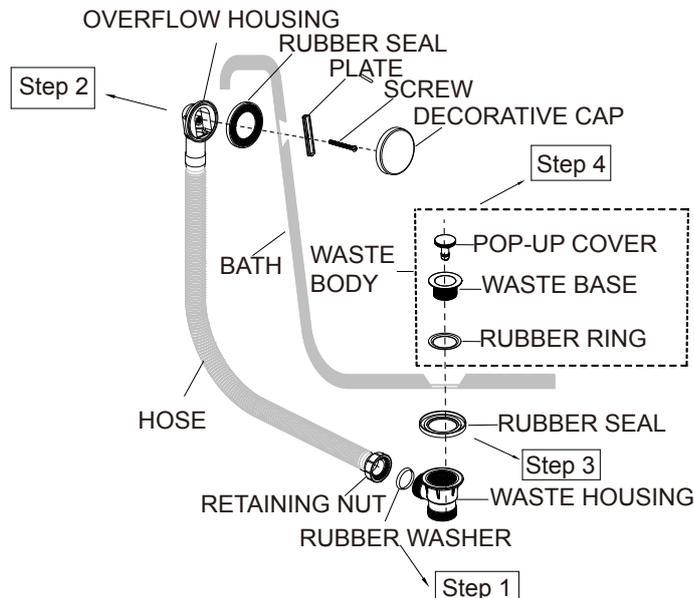

1. Tighten the waste housing into the retaining nut of hose. (Note: make sure the rubber washer is in place between the waste housing and retaining nut).
2. Fit the rubber seal onto the overflow housing, then use the screw to fix the support plate and overflow housing through the overflow hole at an appropriate position, and fix the decorative cap.
3. Install the rubber seal into the waste housing, and place it to hole of bathtub underneath.
4. Tighten waste body into waste housing.

### Maintenance

We do NOT recommend you use any household cleaners to clean the product. Because these cleaners change substance or formula too frequently. The product should be always cleaned only with soapy water and rinsed with clean water and dried with a soft cloth.