



Tools required:

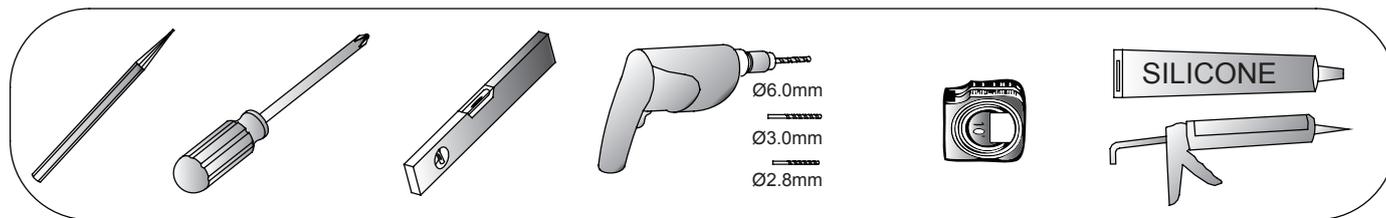

Parts supplied:









EcoSquare Bathscreen LH - BS8

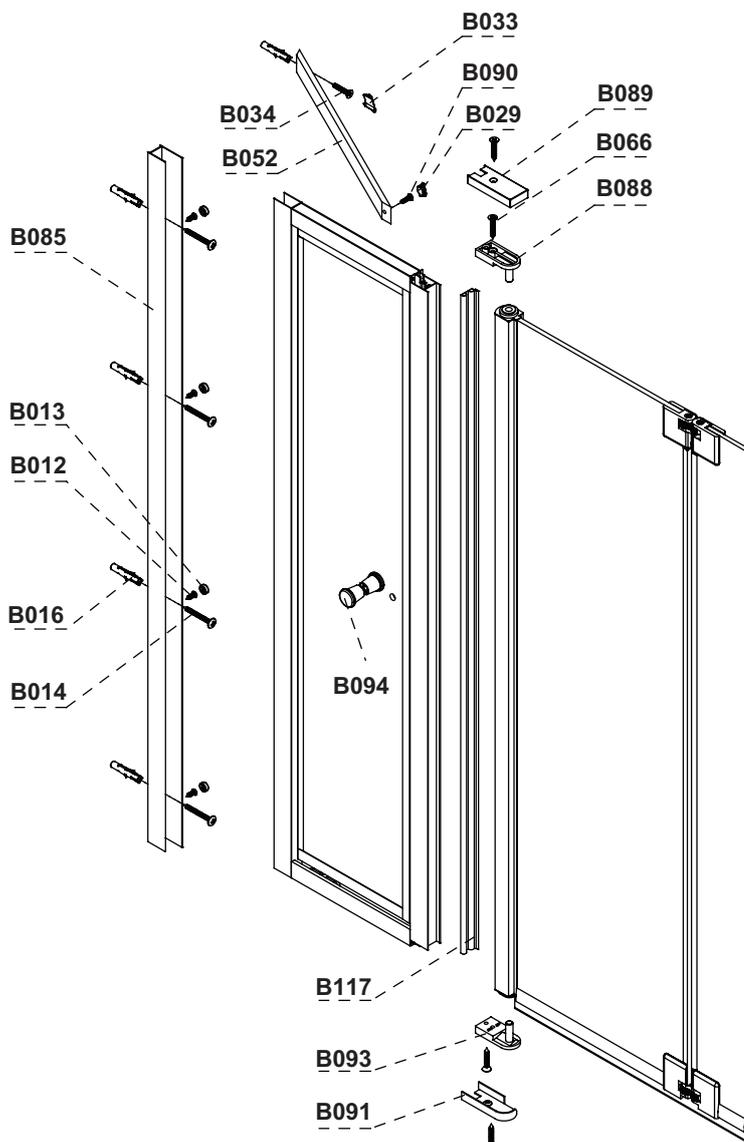







B088 1x	B066 4x ST4*30mm	B089 1x	B029 1x	B090 1x ST4*10mm	B033 1x
B034 1x ST4*35mm	B052 1x	B085 1x	B013 4x	B012 4x ST3.5*10mm	B016 5x
B014 4x ST4*50mm	B091 1x	B093 1x	B094 1x	B117 1x	

1



Ensure that the fixed panel with waterproof strip is positioned for assembly, so that the lip of the waterproof strip is going to be on the inside of the bath.

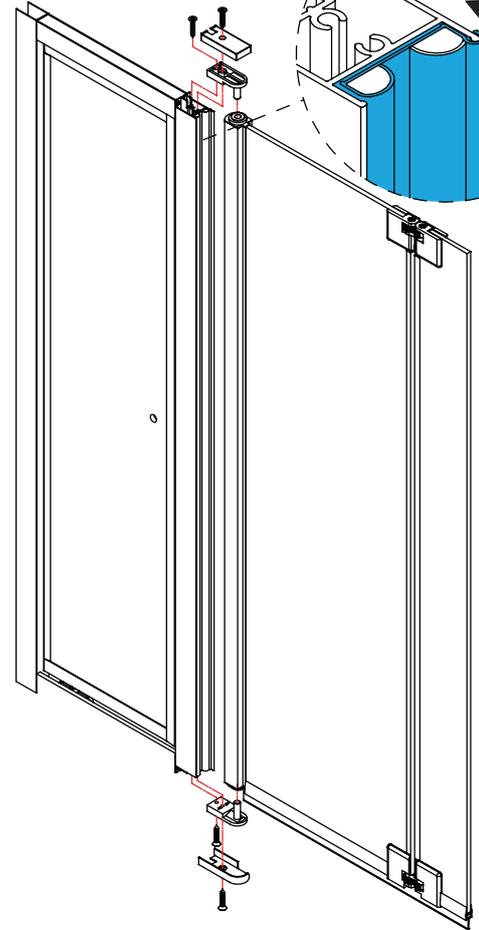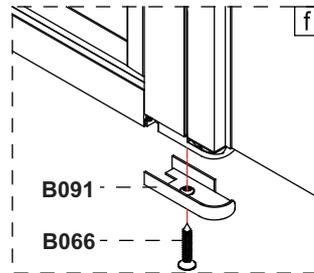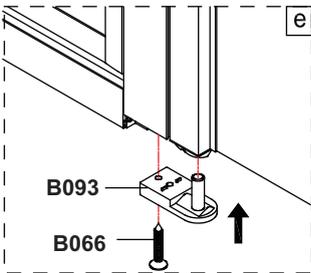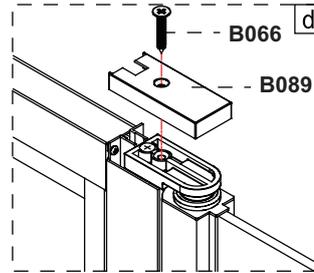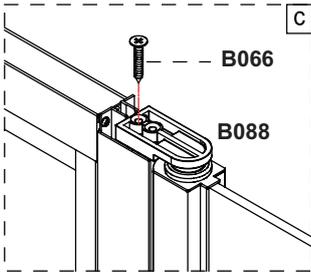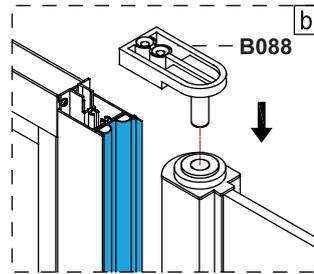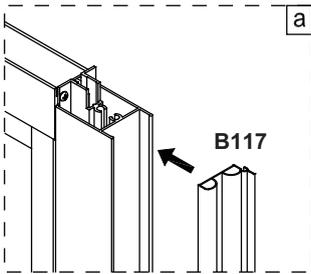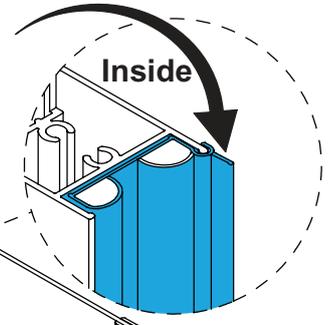

2

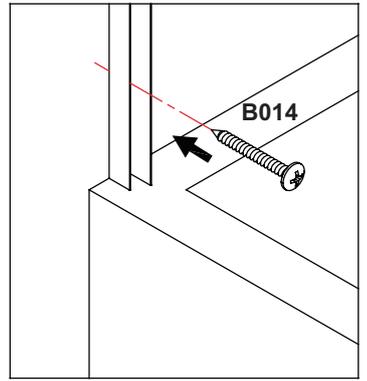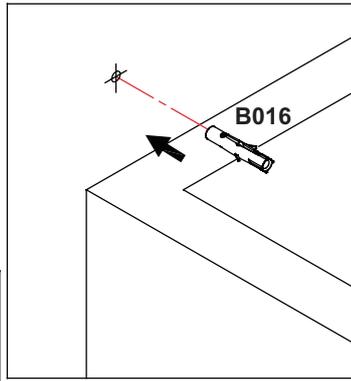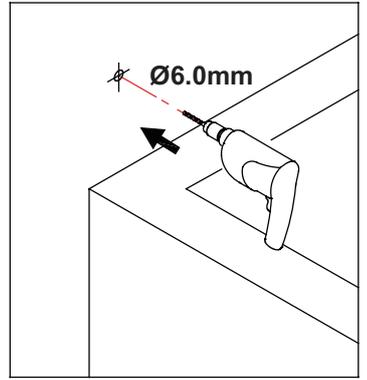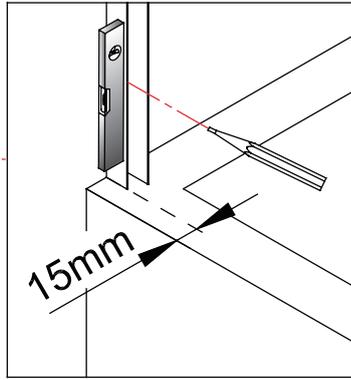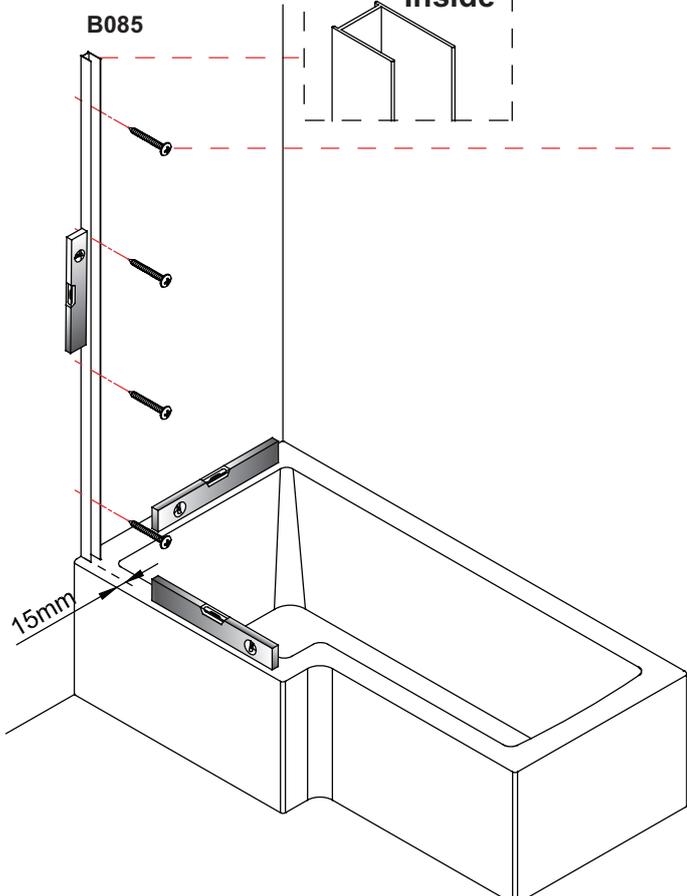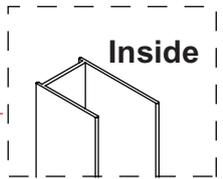


3

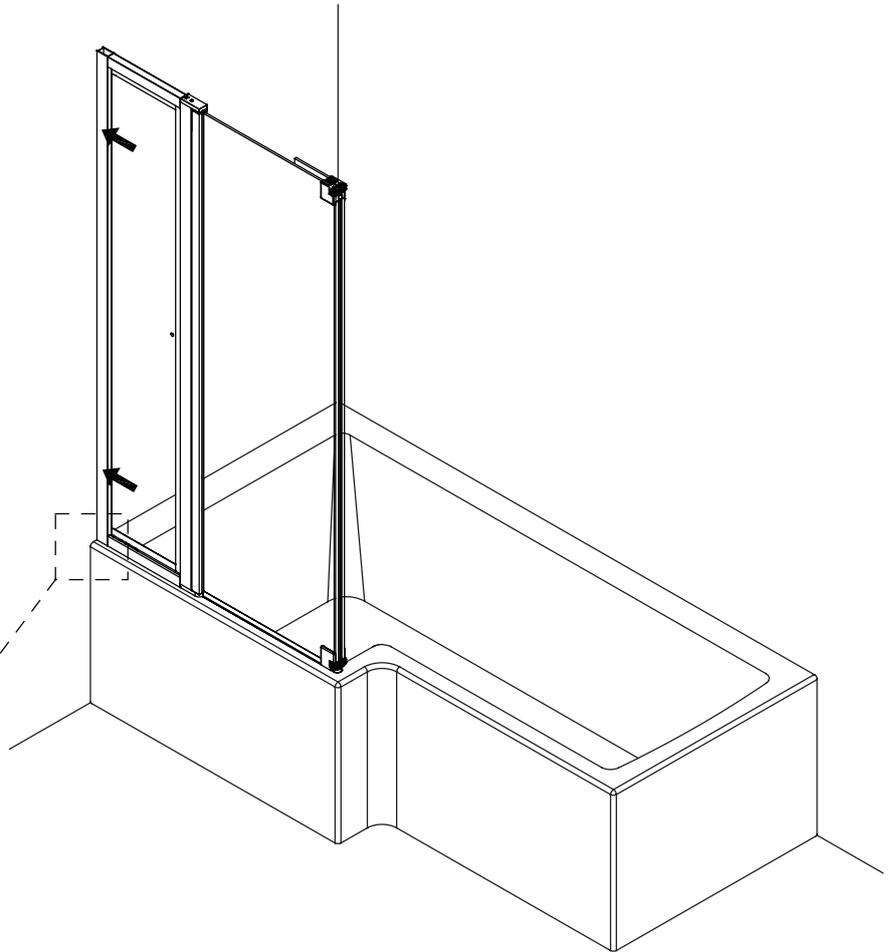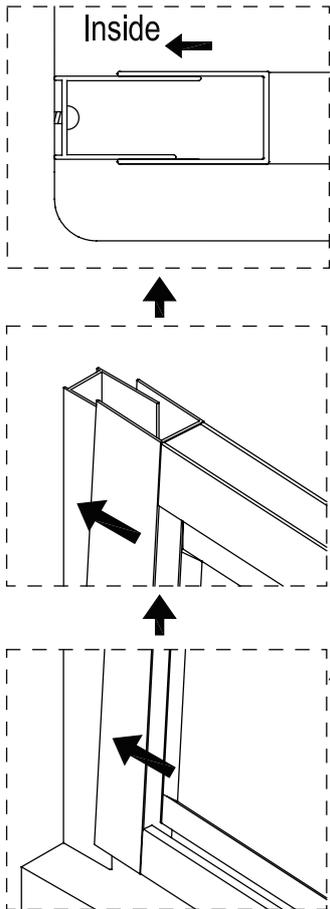






4




Firmly push the screen profile onto the wall profile, ensure the screen profile is as close to the wall as possible. Before securing the screen to the profile ensure that the gap between the screen and the bath is equal along its whole length.

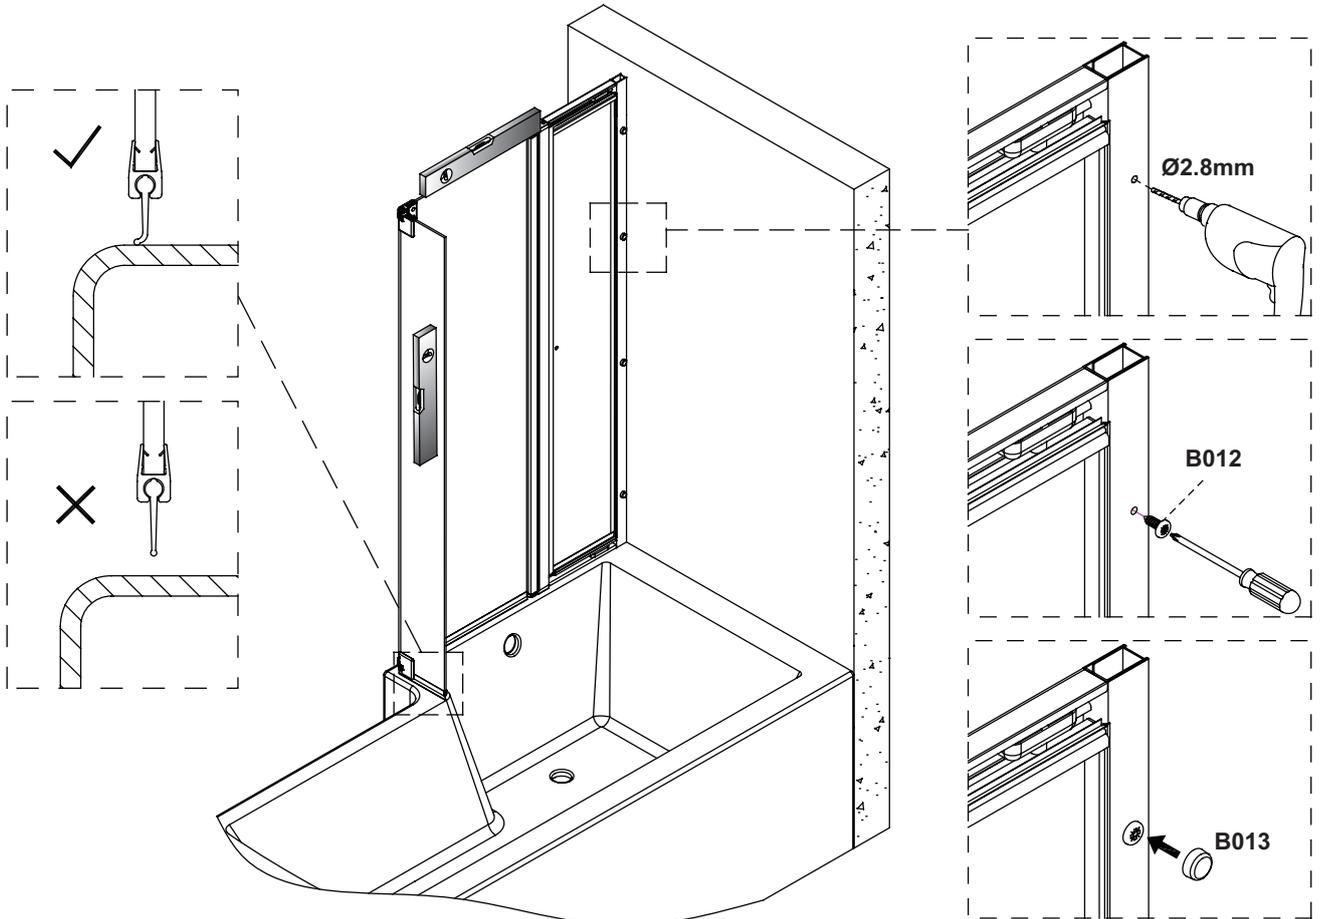

5

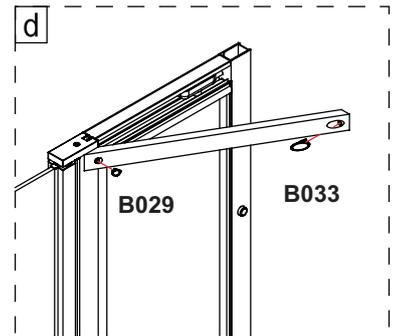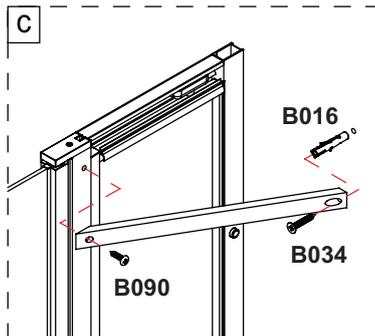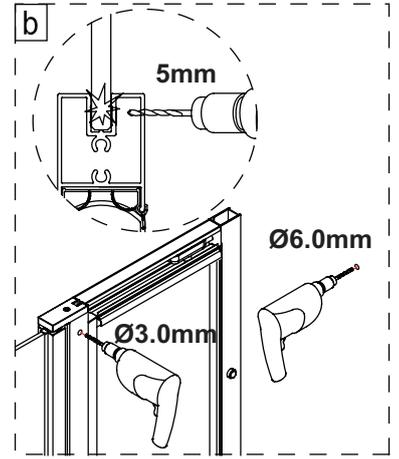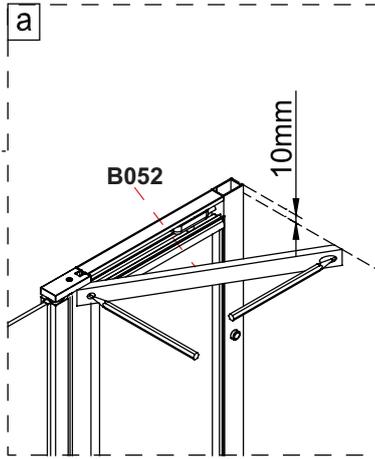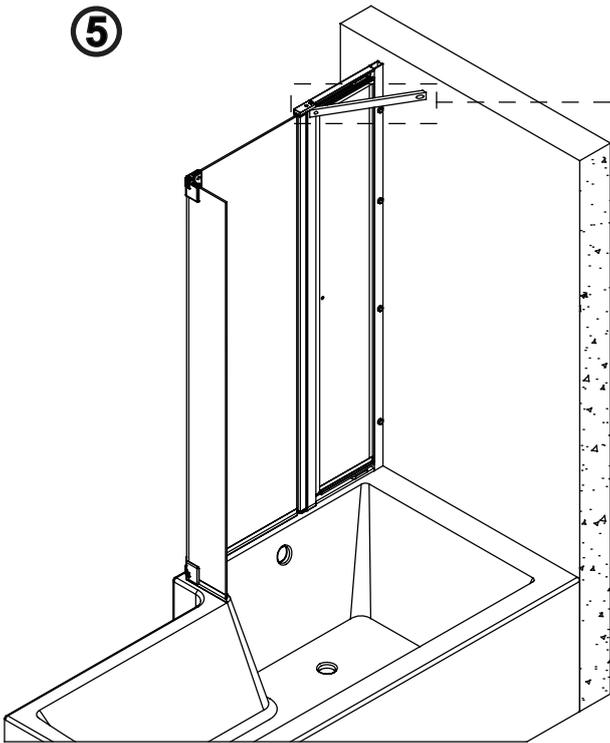

6

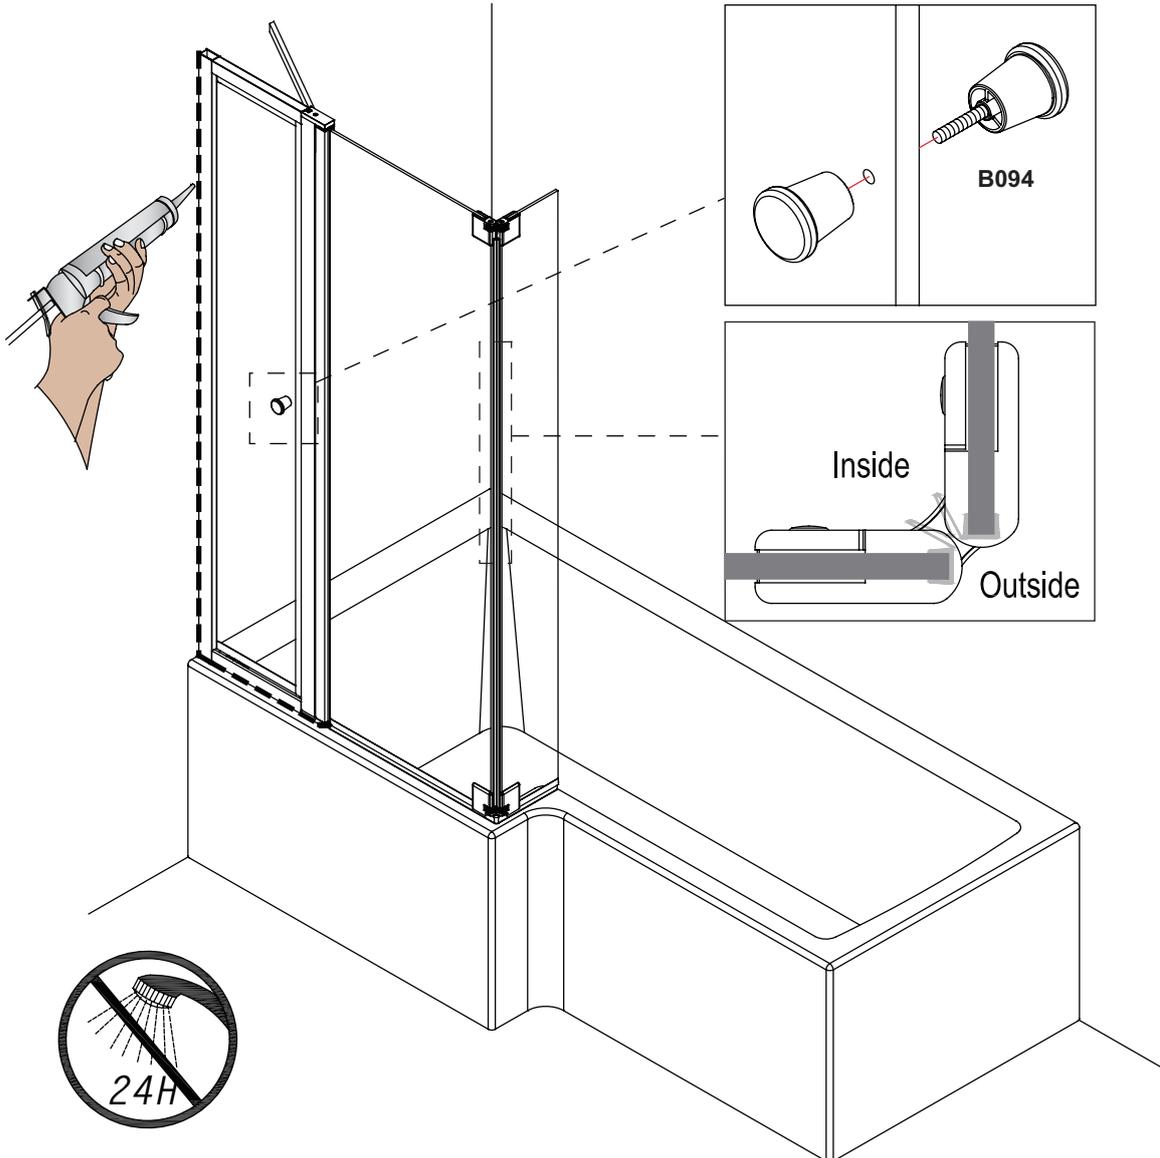

If the access panel is not square, which may happen during transportation or improper handling, please follow the below steps to adjust .



Note: Please loosen the screw slightly, do not take the screw out completely.

